

apuro

Sous Vide Water Bath

Instruction manual



**Model
DM869-A**

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - Wiring Regulations
 - Building Regulations
- DO NOT immerse the appliance in water above the **MAX** Fill line, or use jet/pressure washers to clean the appliance.
- Do not immerse the appliance below the **MIN** Fill line.
- Do not use the appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a APURO agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- DO NOT use if damaged.

- **DO NOT touch the outer surfaces of the appliance. They become hot during use.**
- APURO recommend that this appliance is PAT tested on an annual basis to ensure the product remains safe.



Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your APURO product.

Pack Contents

The following is included:


- APURO Sous Vide Water Bath
- Instruction Manual
- Rack
- Base Plate

APURO prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your APURO dealer immediately.

Function

LCD Display

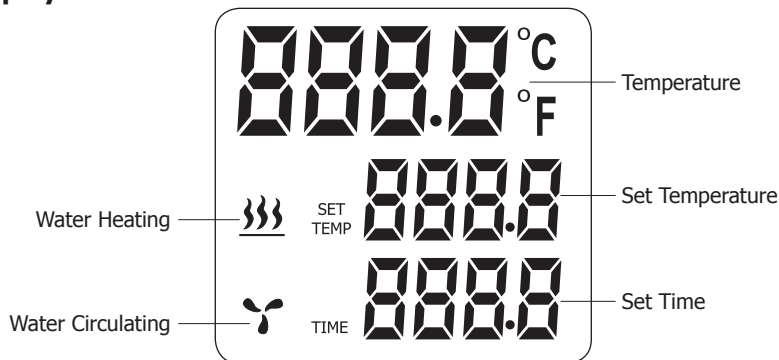


- **Water Heating:** When displayed water is being heated
- **Water Circulating:** When displayed water is being stirred
- **Temperature:** Displays actual temperature of water
- **Set Temperature:** Temperature set point
- **Set Time:** In setting mode display shows the time set point. In working mode display shows the time left.

Operation

1. Add water to the water bath.









Note: the water level (after the food is put in) should be higher than the MIN but lower than the MAX markings on the machine.

2. Turn on by pressing the On/Off button at the back of the machine.
3. Press the Temperature Display button  to set the unit to display °C or °F.



Note: Default setting is °C. After choosing °C or °F, the appliance will remember your setting for future use.

4. Press  **TIME**  and  **TEMP**  to set working time and temperature.
5. After setting time and temperature, press  to start the unit heating. Pressing  will stop the unit heating.



Note: The appliance is designed to hold temperature with lid on. It will not hold temperature without lid.

6. When the water reaches the desired temperature place the food to be cooked into the water bath.



Note: before Sous Vide cooking, the food should be vacuum packed first.

7. When set time has expired the Sous Vide will beep. Press  to stop the appliance heating.



Note: the appliance will go on beeping every 20 seconds. If there is no action by the operator the water temperature will be held at the pre-set temperature.

Cleaning, Care & Maintenance



Switch off and disconnect from the power supply before cleaning.

- Disconnect from power by removing the plug, allow to cool before wiping exterior surfaces and removing any loose debris.
- Unit should be regularly descaled using a food safe descaler.

Troubleshooting

| Fault | Probable Cause | Solution |
|--------------------------------|----------------------------|---|
| Appliance does not heat | No power | Make sure the appliance is plugged in correctly |
| | Power switch is set to OFF | Set the power switch to ON |
| No power | Auto re-set activated | This product is fitted with a thermal protector. Allow unit to cool for 30-45 minutes |
| Slow to Heat | Unit needs descaling | Descal the appliance |
| Error message E01 is displayed | Water level is too low | Add water, making sure the water level is between the MIN and MAX line |
| LCD Display does not switch on | Power switch is set to OFF | Set the power switch to ON |

Technical Specifications

| Model | Voltage | Power | Current | Dimensions (h x w x d mm) | Weight |
|----------------|-----------|-------|---------|---------------------------|--------|
| DM869-A | 230V 50Hz | 620W | 2.8A | 280 x 415 x 260 | 7.5kg |

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

APURO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

APURO products have been approved to carry the following symbol:




All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of APURO.

Every effort is made to ensure all details are correct at the time of going to press, however, APURO reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

| | |
|-------------------------|--|
| Equipment Type | Sous Vide Water Bath |
| Model | DM869-A |
| Legislation | Electrical Safety Electromagnetic Compatibility |
| Standards | AS/NZS IEC 60335.2.15:2002 +A1-A4 (ESV160377/00) AS/NZS CISPR 14-1:2013 |
| Producer Name | Apuro |
| Producer Address | 15 Badgally Road, Campbelltown, NSW 2560 |

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).
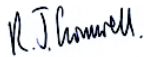
| | |
|------------------|---|
| Date | 16/02/2017 |
| Signature |  |
| Full Name | Richard Cromwell |
| Position | Commercial Director |



DM869-A_A5_v2_20190128