

# 600 / 400 / 150 litre series Refrigerators/Freezers

**Instruction manual** 



Model • Modèle • Modell • Modello • Modelo • Malli:

CD080-A/CD081-A/CD082-A/CD083-A/CD084-A/CD085-A/CD610-A/CD611-A/CD612-A/CD613-A/CD614-A/CD615-A/CD086-A/CD087-A/CD088-A



# **Safety Tips**

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - Fire Precautions
  - Wiring Regulations
  - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT use the appliance outside.
- DO NOT use this appliance to store medical supplies.
- DO NOT use electrical appliances inside the appliance (e.g. heaters, ice cream makers etc.).
- DO NOT allow oil or fat to come into contact with the plastic components or door seal. Clean immediately if contact occurs.
- DO NOT store products on top of the appliance.
- Bottles that contain a high percentage of alcohol must be sealed and placed vertically in the refrigerator.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- Always switch off and disconnect the power supply to the unit before cleaning.
- Keep all packaging away from children. Dispose of the packaging in accordance with the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a POLAR agent or a recommended qualified technician in order to avoid a hazard.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Polar recommend that this appliance is PAT tested on an annual basis to ensure the product remains safe.

### **Caution Risk of Fire**

 Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.



Warning: Keep all ventilation openings clear of obstruction. Unit should not be boxed in without adequate ventilation.

- Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Warning: Do not damage the refrigerant circuit.
- **Warning:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.

# **Product Description**

- CD080-A 150 litre Refrigerator
- CD081-A 140 litre Freezer
- CD082-A 400 litre Refrigerator
- CD083-A 365 litre Freezer
- CD084-A 600 litre Refrigerator
- CD085-A 600 litre Freezer
- CD086-A 150 litre Glass-Door Refrigerator
- CD087-A 400 litre Glass-Door Refrigerator
- CD088-A 600 litre Glass-Door Refrigerator
- CD613-A 365 litre Freezer
- CD614-A 600 litre Refrigerator
- CD615-A 600 litre Freezer
- CD610-A 150 litre Refrigerator
- CD611-A 140 litre Freezer
- CD612-A 400 litre Refrigerator

### **Introduction**

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your POLAR product.

(AU)

Telephone Helpline: 1300225960

### **Pack Contents**

The following is included:

- POLAR Refrigerator / Freezer
- Shelves Refrigerator only CD610-A/ CD080-A x 3/ CD086 x 3 CD612-A/ CD082-A x 4 / CD087 x 4 CD614-A x 4 / CD084-A / CD088 x 4
- Keys x 2
- Spacers x 2
- Instruction Manual

POLAR prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your POLAR dealer immediately.

### **Installation**



Note: If the unit has not been stored or moved in an upright position, let it stand upright for approximately 12 hours before operation. If in doubt allow to stand.

- Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces.
- Maintain a distance of 20cm (7 inches) between the unit and walls or other objects for ventilation. NEVER LOCATE NEXT TO OR NEAR A HEAT SOURCE.



Note: Before using the appliance for the first time, clean the shelves and interior with soapy water.


The appliance is supplied with feet by default. However, castors can be supplied as an option from serial number range: 8128595-AU onwards.


#### Reversing the door

Depending on the location of the appliance, it may be necessary to change the direction the door opens by changing the side of the door handle.

To reverse the door handle:


1. The door handle is on the left side. Disassemble the right lower hinge.

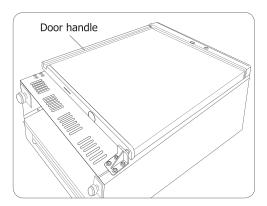

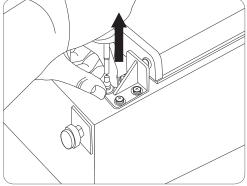



4

2. Remove the door from the right upper hinge. Then remove the hinge sleeve from the door top.

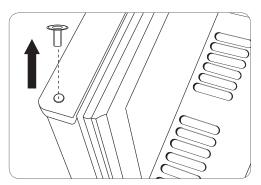


3. Remove the right upper hinge and install it on the left side. Afterwards, install the hinge sleeve onto the hinge.

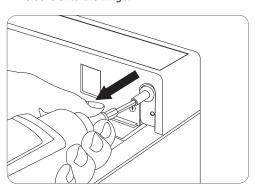


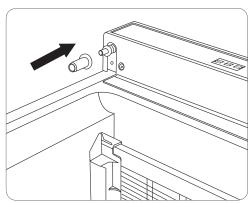


4. Reverse the door and hang it onto the left upper hinge.

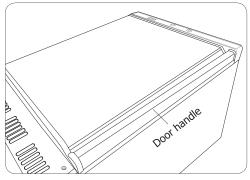

5. Remove the pre-mounted screws on the left lower side.

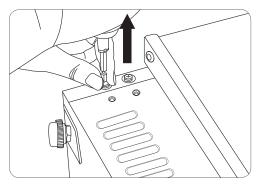


6. Install the previously removed right lower hinge on the left side.

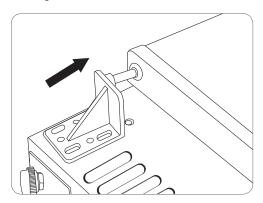


(AU)

Telephone Helpline: 1300225960

7. Secure the hinge in place using the previously removed screws.

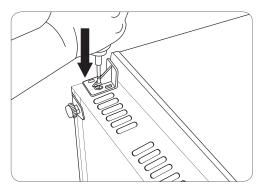

8. Now the door handle is installed on the right

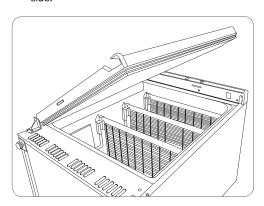

# **Operation**

#### **Control Panel**

The control panel is located on the front of the appliance.



### **Turn On**

- 9. Close the door of the appliance.
- 10. Connect the appliance to a mains power supply.

### **Set the Operating Temperature**

- 11. Press the **SET** button. The display will flash.
- 12. Press the or buttons to display the required temperature.
- 13. Press the **SET** button to store the temperature.

#### **Manual Defrost**

Press and hold the defrost button "aux" for 2 seconds to begin a manual defrost. The defrost light illuminates.

### **Storing Food**

To get the best results from your POLAR appliance, follow these instructions:

- Only store foodstuffs in the appliance when it has reached the correct operating temperature.
- Do not place uncovered hot food or liquid inside the appliance.
- Wrap or cover food where possible.
- Do not obstruct the fans inside the appliance.
- Avoid opening the doors for prolonged periods of time.

### **Lock/Unlock the Doors**

- A lock is fitted to the doors to ensure foodstuffs are kept secure within your POLAR appliance.
- Use the keys provided to lock/unlock the door.

Telephone Helpline: 1300225960



# Cleaning, Care & Maintenance



### Switch off and disconnect from the power supply before cleaning.

- Clean the interior of the appliance as often as possible.
- Do not use abrasive cleaning agents. These can leave harmful residues.
- · Clean the door seal with warm soapy water.
- Always wipe dry after cleaning.
- Do not allow water used in cleaning to run through the drain hole into the evaporation pan.
- Take care when cleaning the rear of the appliance. Sharp edges can cut.
- A POLAR agent or qualified technician must carry out repairs if required.

#### **Cleaning the Condenser**

Periodically cleaning the condenser can extend the life of the appliance. POLAR recommend that a POLAR agent or qualified technician should clean the condenser.

# **Troubleshooting**

If your POLAR appliance develops a fault, please check the following table before making a call to the Helpline or your POLAR dealer.

Fault	Probable Cause	Solution	
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on	
	Plug and lead are damaged	Call POLAR agent or qualified Technician	
	Fuse in the plug has blown	Replace the fuse	
	Power supply	Check power supply	
	Internal wiring fault	Call POLAR agent or qualified Technician	
The appliance turns on,	Too much ice on the evaporator	Defrost the appliance	
but the temperature is too high/low	Condenser blocked with dust	Call POLAR agent or qualified Technician	
too niignylow	Doors are not shut properly	Check doors are shut and seals are not damaged	
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the refrigerator to a more suitable location	
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position	
	Unsuitable foodstuffs are being stored in the appliance	Remove any excessive hot foodstuffs or blockages to the fan	
	Appliance is overloaded	Reduce the amount of food stored in the appliance	
The appliance is leaking water	The appliance is not properly levelled	Adjust the screw feet to level the appliance (if applicable)	
	The discharge outlet is blocked	Clear the discharge outlet	

Telephone Helpline: 1300225960

Fault	Probable Cause	Solution
The appliance is leaking water	Movement of water to the drain is obstructed	Clear the floor of the appliance (if applicable)
	The water container is damaged	Call POLAR agent or qualified Technician
The appliance is unusually loud	Loose nut/screw	Check and tighten all nuts and screws
	The appliance has not been installed in a level or stable position	Check installation position and change if necessary
The lamp does not illuminate	Lamp needing replacing	Call POLAR agent or qualified Technician

# **Technical Specifications**

Model	Voltage	Power	Current	Temperature Range	Capacity (litres)	Refrigerant	Dimensions H x W x D mm	Weight (kg)
CD610-A CD080-A	220-240V 50Hz	150	1.0A	2°C to 8°C	150	R600a (35g)	850 x 600 x 600	44
CD611-A CD081-A	220-240V 50Hz	150	1.0A	-10°C to -25°C	140	R600a (60g)	850 x 600 x 600	44.5
CD612-A CD082-A	220-240V 50Hz	185	1.5A	2°C to 8°C	400	R600a (75g)	1850 x 600 x 600	69
CD613-A CD083-A	220-240V 50Hz	210	2A	-10°C to -25°C	365	R600a (90g)	1850 x 600 x 600	71
CD614-A CD084-A	220-240V 50Hz	185	1.5A	2°C to 8°C	600	R600a (100g)	1890 x 777 x 695	90
CD615-A CD085-A	220-240V 50Hz	350	3.5A	-10°C to -25°C	600	R600a (150g)	1890 x 777 x 695	94
CD086-A	220-240V 50Hz	150	1.0A	2°C to 8°C	150	R600a (35g)	850 x 600 x 600	47
CD087-A	220-240V 50Hz	185	1.5A	2°C to 8°C	400	R600a (90g)	1850 x 600 x 600	72
CD088-A	220-240V 50Hz	185	1.5A	2°C to 8°C	600	R600a (110g)	1890 x 777 x 695	93

Telephone Helpline: 1300225960



# **Electrical Wiring**

The plug is to be connected to a suitable mains socket.

POLAR appliances are wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

## **Compliance**

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

POLAR parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



POLAR products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of POLAR.

Every effort is made to ensure all details are correct at the time of going to press, however, POLAR reserve the right to change specifications without notice.

# **DECLARATION OF CONFORMITY**

Equipment Type	Glass Door Refrigerator	
	CD086-A,CD087-A,CD088-A,CD080-A	
Model	CD081-A,CD610-A,CD611-A,CD612-A	
	CD613-A,CD614-A,CD615-A,CD082-A	
	CD083-A,CD084-A,CD085-A	
Legislation	AS/NZ 3820 Essential Safety requirements for	
	Low Voltage Electrical Equipment	
	Electromagnetic Compatibility	
Standards	AS NZS 60335-1:2011 Inc. A1-4	
	AS NZS 60335-2-89:2010 Inc A1-2	
	EN 55014-1:2017	
	EN 55014-2:2015	
	EN 61000-3-2:2014	
	EN 61000-3-3:2014	
Producer Name	POLAR	
Producer Address	15 Badgally Road,	
	Campbelltown,	
	NSW 2560	

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

Date	1 <sup>st</sup> March 2019
Signature	Allego
Full Name	Ashley Hooper
Position	Technical & Quality Manager/ Responsible Supplier





http://www.polar-refrigerator.com/

CD610-A-CD615-A\_CD080-A-CD088-A\_A5\_v9\_20190306